Breezy Day Park Flyer






Your kit contains the following parts. Please check your kit for any missing or damaged parts before starting construction.

COMPLETE KIT PARTS LIST									
Wood Bag:									
1 LC-304-01	1/16"x4"x24" Laser Cut BALSA	1 LC-304-02	1/16"x4"x24" Laser Cut BALSA						
1 LC-304-03	1/16"x4"x24" Laser Cut BALSA	1 LC-304-04	1/16"X4"X24"LaserCut BALSA						
1 LC-304-05	3/32"x3"x18" Laser Cut BALSA	1 LC-304-06	3/32"x3"x18" Laser Cut BALSA						
1 LC-304-07	1/32"x3"x18" Laser Cut BALSA	1 LC-304-08	3mmx2.5"x9"" Laser Cut POPLAR PLY						
1 LC-304-09	1/16"x2.3"x3" Laser Cut BIRCH PLY	4 Main Wing Spars	3/32"x3/16"x18" BALSA						
4 Wing Trailing Edges	1/32"x1/2"x18" BALSA	2 Wing Leading Edges	3/16"x3/16"x18" BALSA						
8 Fuselage Stringers	1/16"x1/16"x18" BALSA	1 Wing Center Section Sheet	1/32"x3"x12" BALSA						
4 Turbulator Spars	3/32"x3/32"x18" BALSA	1 Landing Gear Wire	1/16"x12" MUSIC WIRE						
Misc. Parts Loose in Box:									
1 K-304 INSTRUCTIONS		1 K-304 PLAN A							
1 K-304 PLAN B		1 NYLON TIE WRAP							
1 PROPELLER		1 .005"x2"x6" ACETATE							
Hardware Bag:									
3 Wing Dowels & Elevator Joiner	1/8"x3" BIRCH DOWEL	2 1 7/16" PLASTIC WHEEL							
2 1/16" WHEEL RETAINER		1 TAIL WHEEL ASSEMBLY							

The first thing that you need to do is to identify and mark the part numbers on the laser cut parts using the drawings on the following pages as a guide.

It is possible that several of the laser cut parts may not be completely cut through. If this is the case you can free the part from the sheet quickly using an X-acto knife.

NOTE: The slight discoloration on the edges of the laser cut parts may be removed by lightly sanding the edges with 400 grit sandpaper.

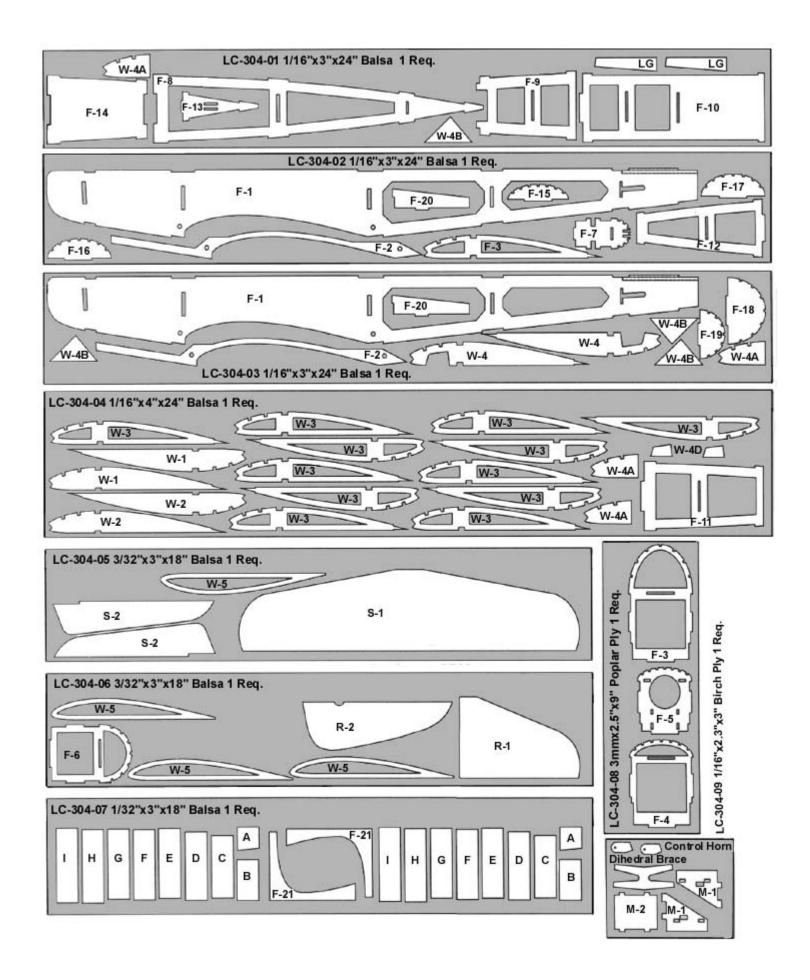

	Additional Items Required (Not Included in Kit)							
	Note: These are parts that we have used and are familiar with. There are many other brands available and you may substitute other items that you are more comfortable with or have on hand.							
ŀ	Motor	6 Volt 280 Class Electric Motor	1	Radio	3 Channel Radio with micro servos & Receiver			
	Speed Control	5 Amp Electronic Speed Control with BEC	1	Battery	7 Cell 270mAh NiCAD Battery or 7 cell 720Mah NiMH Battery			
	_	Sig Easy Hinges #SH-710 or Du-Bro Kwik Hinge #537	2	Pushrods	Du-Bro #847 Micro Pushrod Assy.			
	Covering Material	1 Roll covering material Plus Trim Colors		Wing hold down Rubber bands	#32 rubber bands			

General Note: Cover the plans with wax paper before assembling your model to prevent the parts from sticking to the plan.

Building the Tail Surfaces

- 1. Temporarily hinge the rudder (R-2) to the fin (R-1). Do not glue the hinges at this time.
- 2. Sand one of the 1/8"dowels to 3/32" diameter. Join the elevators using this dowel. Use the plan of the stabilizer as a guide. Trim the dowel as required to achieve the proper length.
- 3. Temporarily hinge the elevators to the stabilizer. Do not glue the hinges at this time.
- 4. Sand the tail surfaces smooth and round all of the edges except the bottom edge of the fin.

Building the Fueslage

- 5. Glue the F-2 doubler to the inside of the fuselage sides. Be sure to make a right hand and a left hand side.
- 6. Glue formers F-3 and F-4 into position on the right fuselage side. The formers should be 90 degrees to the fuselage side.
- 7. Glue the left fuselage side into position on the formers. Glue former F-5 into position.
- 8. Pull the rear of the fuselage sides together and hold with a clothespin. Do not glue at this time.
- 9. Glue the 1/16" sq. reinforcement to the top and bottom of F-6 & F-7 as shown on the plan.
- 10. Place formers F-6 and F-7 into position and glue into position. Glue the rear end of the fuselage sides together.
- 11. Glue F-8 into position on the bottom rear of the fuselage.
- 12. Working from the front to the rear, glue F-9 through F-13 into position on the top of the fuselage.
- 13. Glue F-14 to the bottom front of the fuselage.
- 14. Working from the front to the rear, glue F-15 through F-20 into position on the top of the fuselage.
- 15. Glue the 1/16" sq. stringers into position from former F-3 to the rear of the fuselage. The top center stringer stops at F-7. The remaining side stringers stop about 1/2" from the back edge of F-20. Now glue the 1/16" sq. stringers into position between formers F-5 and F-17.
- 16. Cut the paper covering for the front of F-3 from the plan and glue it to F-3.
- 17. Glue the F-21 cockpit sides into position. Wet them slightly to allow them to bend easily. The forward parts are longer than needed and should be trimmed to meet at the fuselage centerline at the top of F-17. These parts should be flush with the formers and fuselage sides and not on top of them.
- 18. Glue the motor mount parts M-1 and M-2 together and to the front of F-5.
- 19. Sand the fuselage smooth all over. Cut the wood away from the stabilizer slot at the rear of the fuselage and then set the fuselage aside until needed.

Building the Wing

- 20. Cover the wing plan with wax paper to prevent the parts from sticking to the plan.
- 21. Pin the lower spar and the lower trailing edge to the plan. Align the inboard ends with the wing center line. The outboard ends will extend past the last W-3 rib.
- 22. Glue rib W-2 into position 90 degrees to the building board.
- 23. Glue shear web "A" into position against the lower spar and rib W-2 as shown on the plan.
- 24. Glue rib W-1 into position. The top of the rib should angle slightly toward the wing tip.
- 25. Glue all of the W-3 ribs into position. The should be 90 degrees to the building board. Glue parts W-4A to each side of rib W-4 and glue the rib into position.
- 26. Glue the top spar, top trailing edge, turbulator spars and leading edge into place.
- 27. Remove the wing from the plan. Glue the remaining shear webs (B through I) into position.
- 28. Trim the spars, leading edge and trailing edge flush with the last W-3 rib. Now glue the two W-5 wing tip ribs to the last W-3 rib.
- 29. Cut and glue the bottom center section sheet into position as shown on the plan. Glue parts W-4B into position flush with the bottom of the wing.
- 30. Now build the right wing as you did the left.
- 31. Sand both wing panels smooth and sand the leading edges round. Lightly round the edges of the wing tips.
- 32. Cut slots in both W-1 ribs to accept the dihedral brace as shown on the plan.
- 33. Slide the dihedral brace into position in the left wing. Position it tightly between the spars and forward against the shear web and glue into position.
- 34. Glue the right wing onto the left. Now test fit the wing onto the fuselage and sand the wing as required to produce a good fit if needed.

Covering

- 35. Sand all parts smooth with 200 grit sandpaper.
- 36. Cover the model using your choice of material. We used Top Flite Monokote and it works very well. However there are many other covering materials that can be used. We recommend using the lowest heat setting that will attach the covering to minimize the shrinkage and reduce the possibilities of warping the structure of the model.
- 37. Cut the windows from covering material using the patterns on the plan and apply to your model.

Note: After the model is covered you must check the tail surfaces and wing for warps or twists. If there are any they can be removed by twisting the parts straight and heating the covering.

Final Assembly

- 38. Cut the covering away from the stabilizer and fin slots in the fuselage. Carefully remove the covering from the stabilizer and fin in the areas that it contacts the fuselage and glue the stabilizer to the fuselage.
- 39. Glue the fin in place on the fuselage.
- 40. Attach the elevators and rudder with the hinges and glue in place.

- 41. Mount the servos to the fuselage sides using servo tape at the location shown on the plan.
- 42. Cut small pockets in the elevator and rudder and glue the control horns into position. They should angle forward slightly so that the pushrod hole is aligned with the hinge line.
- 43. Install the pushrods. They connect to the servos using Du-Bro Mini E/Z Connectors.
- 44. Insert the wing hold down dowels and glue into place.
- 45. Mount the receiver to the fuselage side with a piece of servo tape.
- 46. Bend the main landing gear wires to shape and glue it into position. Glue part F-4D into position to fill the landing gear slot. Cover the landing gear fairings (LG) and attach to the landing gear wires by wrapping a strip of covering material around the wire.
- 47. Put the wheels on the model and press the wheel retainers into position. With the retainers in place, cut off the excess wire axle flush with the retainer. Assemble tail wheel and glue into position.
- 48. Cut the windshield from the supplied plastic using the pattern on the plan. Now glue the windshield into position.
- 49. Connect the motor to the electronic speed control. Apply a small drop of oil to the bearings at each end of the motor.
- 50. Place the motor in the mount. Apply a small drop of thick C/A glue or silicone rubber under the motor and secure to the mount with the nylon tie wrap.
- 51. Plug the speed control into the receiver. Charge and connect the battery and test the radio and power system WITHOUT THE PROPELLER ATTACHED.
- 52. Roughen up the motor shaft with sandpaper and apply a small amount of thick C/A glue and then press the propeller onto the shaft.
- 53. Find the proper balance point for the model with the wing attached by moving the battery forward & aft. Use a 1" sq. piece of velcro to attach the battery in the model at this position.
- 54. Adjust the control throws to the settings shown on the plan.
- 55. Always pre-flight your model thoroughly before each flight. It is your responsibility to verify that your model is airworthy. Always follow established safety guidelines while starting and operating the motor, radio and while flying the model.

WARRANTY

Herr Engineering Corp. guarantees this kit to be free from defects in both materials and workmanship at the time of purchase. This warranty does not cover any component damaged buy use or modification. In no case shall Herr Engineering Corporation's liability exceed the original cost of the purchased kit. Further Herr Engineering Corp. reserves the right to change or modify this warranty without notice.

In that Herr Engineering Corporation has no control over the assembly or use, no liability shall be assumed or accepted for any damage resulting from the use by the user during construction of the kit or the use of the final user assembled product. By the act of building this kit and/or using the final user assembled product, the user accepts all liability.

If the buyer and/or user is not prepared to accept all of the liability associated with this product, he is advised to immediately return this kit in new and unused condition to the place of purchase for a full refund.

© Copyright SIG Mfg. Co., Inc.

SIG MFG. CO., INC......Montezuma, Iowa 50171-0520

LIMIT OF LIABILITY:

In use of our products, Sig Mfg. Co.'s only obligation shall be to replace such quantity of the product proven to be defective. User shall determine the suitability of the product for his or her intended use and shall assume all risk and liability in connection therewith.